


# Desk Top Installation

For installing a standard desk top into a frame assembly.

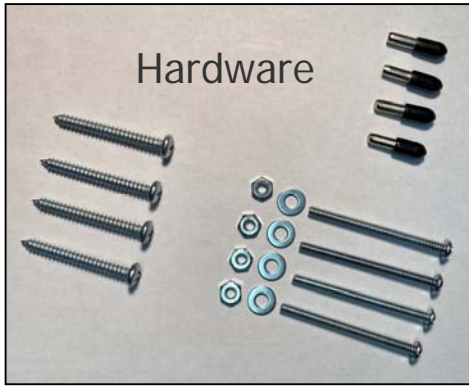


Hardware Included:  
4 - 1" Rubber Coated Pins  
4 - 2" Pan Head Screws  
4 - 2 1/2" Bolts  
4 - Washers  
4 - Nuts  
1 - 3/16" Drill Bit \*


Tool You will Need:  
Phillips  
Screwdriver



**\* NOTE:**  
In the rare event that the holes do not line up properly, we recommend drilling through the hole using the upright as a guide for the 3/16" drill bit.

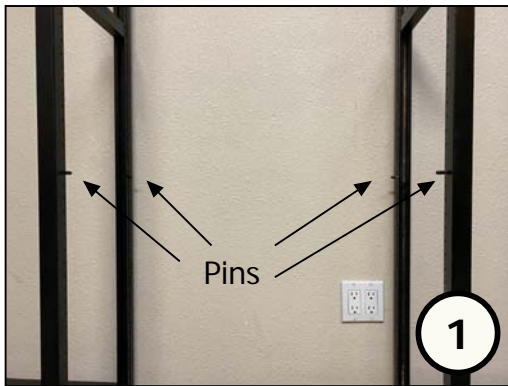

Set the 4 rubber coated pins at 27" off the floor in each upright. They will fit tight.

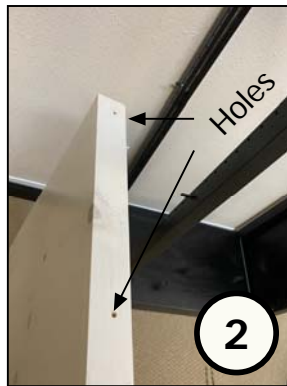


Set desk top onto pins with holes lined up with the uprights.




With OPEN uprights, you will insert four 2 1/2" bolts from the opposite sides of the uprights. If you are installing inside a closed upright see Step "A"



Secure all 4 bolts with washers and nuts. FYI: You can use this bolt as a support for an adjoining shelf.

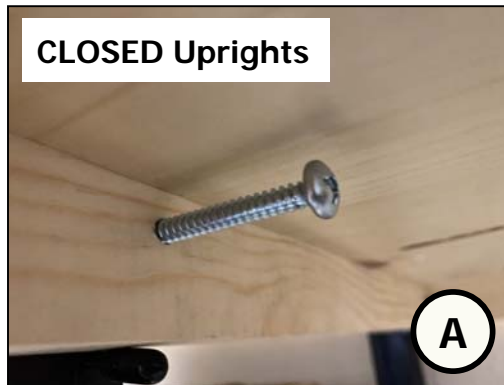

On CLOSED uprights, you will screw in the 2" pan head screws into the upright from under your desk top using a Phillips screwdriver.

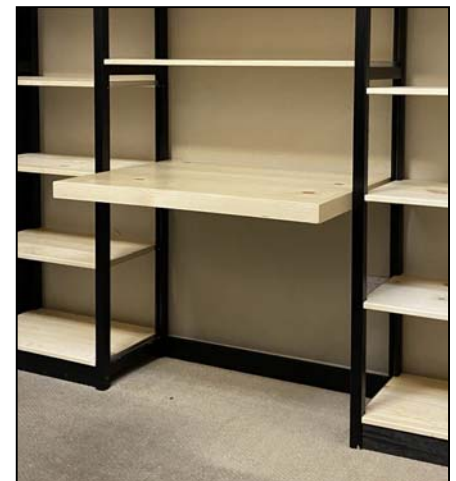

Your installation is complete!